 




Sony Cyber-shot DSC-TX55 Back Case Replacement

This guide will help you successfully replace the back casing on your device.

Written By: Megan East

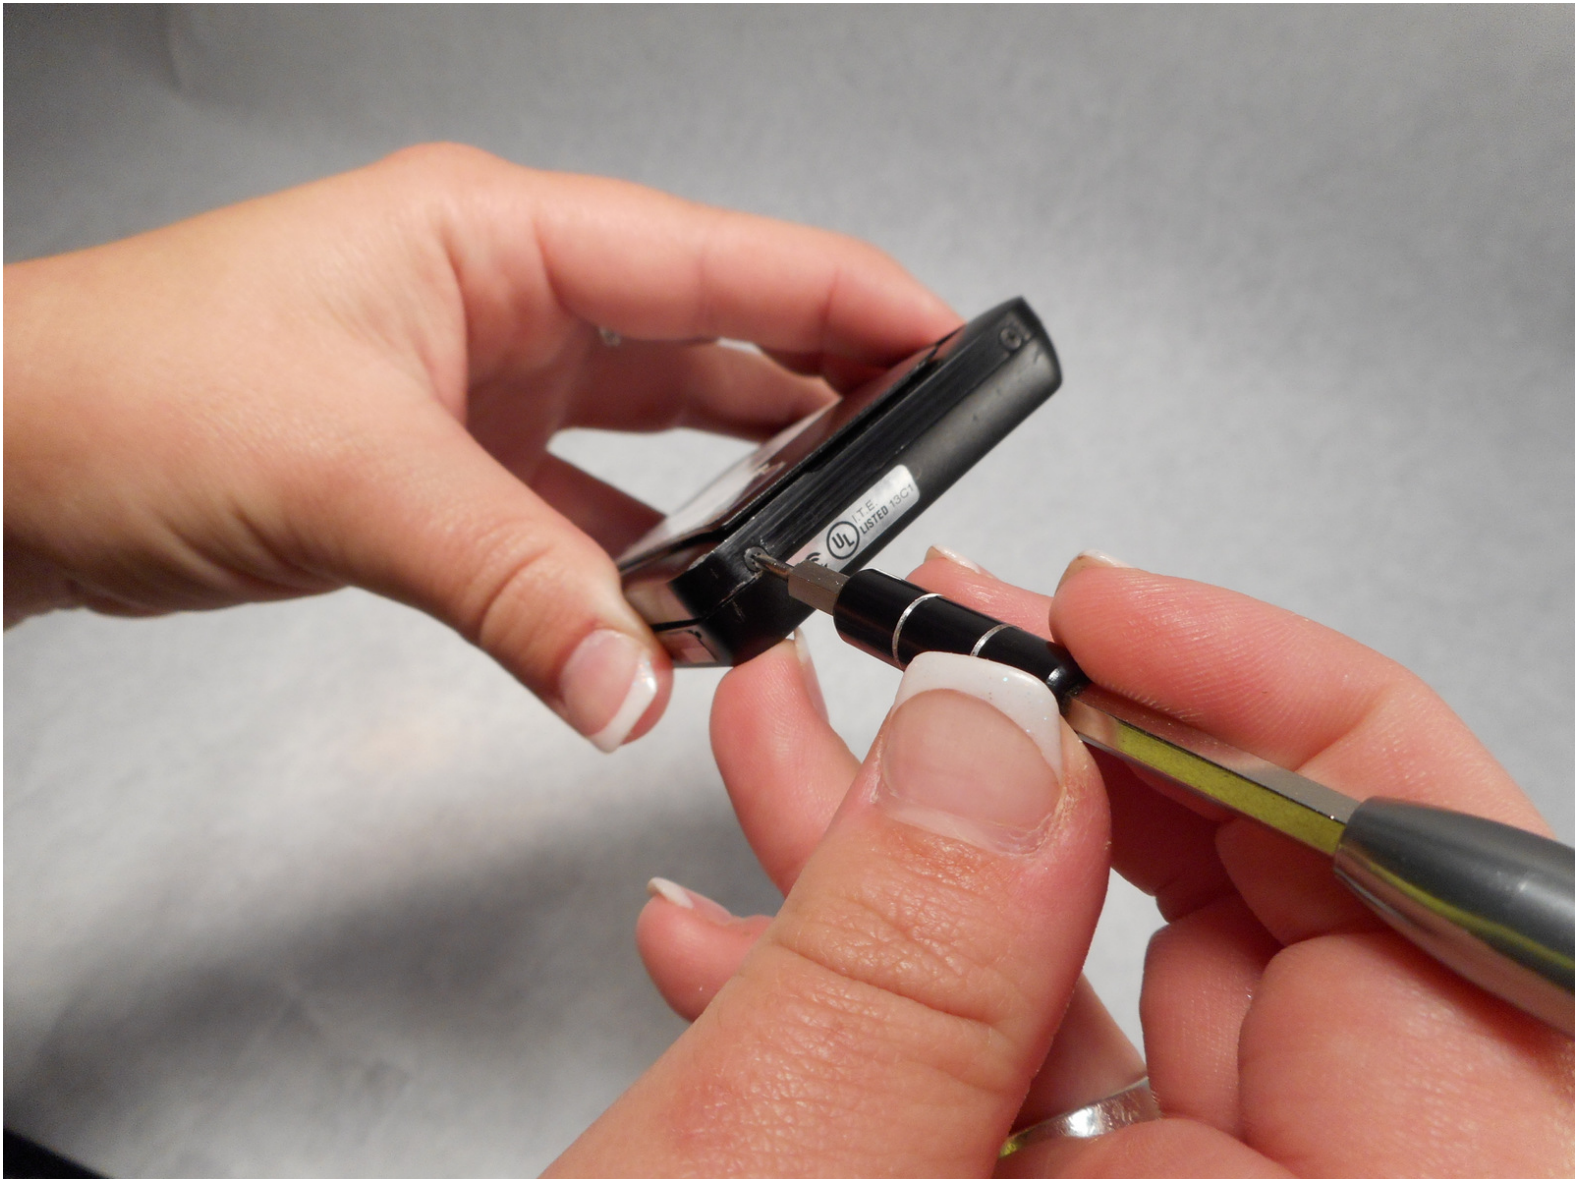




TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Case

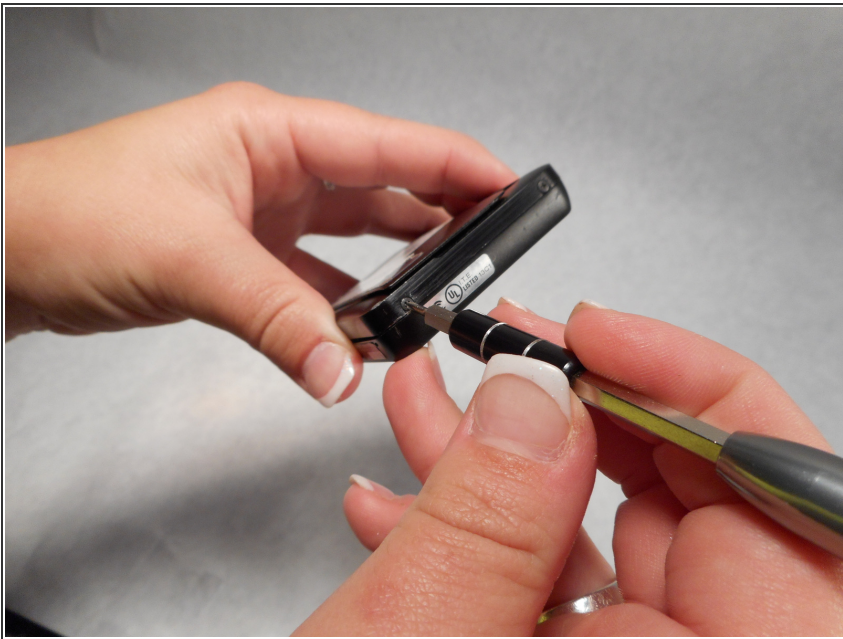

- Using your Phillips #00 screwdriver, remove all four 0.3 cm screws that are located on both ends, as well as the bottom of your Cyber-Shot

Step 2



- Using your right hand, gently pull back the back metal frame of your device.

Step 3



- The back case of the device is the metal frame.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 06:02:11 PM.